



DRC08

User Manual



1.Key function introduction



1:Input mode switch

2: USB playback switch key

3: Folder enter, return key

4: Volume control, confirmation key

5: Previous one

6: Play; pause

7: Next one

2.USB playback mode



1:In other input modes, you can enter the playback function by pressing the USB button once.

2: Press the folder key to enter the folder menu, select by rotating the key 4, and press it again to confirm the playback of the selected song. the folder key again to return to the previous menu.

3:Song operations can be performed through these three buttons

2.Switch the built-in storage mode



Step 1: Hold the USB key for 3 seconds to enter the built-in storage mode switch function.

Step 2: Select the desired by slowly rotating the volume knob (the part in the red circle), and then press the volume key once more to confirm. The mode switch is now complete

3.Control of SUB volume



Step 1: Press and hold the volume key for 3 seconds to enter the SUB volume adjustment function (red circle part)

Step 2: Adjust the volume of SUB by slowly rotating the volume knob, and it will automatically return to the main volume interface if no key is operated for more than 5 seconds