


- ① High Level Output    ② Indicator Light: { Blue Light: In normal operation  
Red Light: Abnormal working state    ③ Positive Input Terminal
- ④ Start Control Terminal    ⑤ Ground Wire Terminal    ⑥ Low Level Input    ⑦ Master Volume Control
- ⑧ Bass Gain Control    ⑨ Frequency Switching: { Full Range: ⑧⑩⑪ are temporarily disabled  
Low Pass : ⑧⑩⑪ are working properly
- ⑩ Infrasound Filter    ⑪ Low Pass Frequency Regulation

### Dimensions & Terminals

### INSTALLATION TIP:

- It is forbidden to dismantle and change the product by oneself. disassembly and modification of the product may cause accidents, fire or electric shock.
- This product is recommended for use in automotive environments with a DC voltage range of 12-14.4 v beyond which failure may occur.
- Before wiring, be sure to disconnect the cable from the Power Terminal First, other-wise it is easy to cause short circuit and cause fire.
- Do not use the screws and nuts in the brake system when installing and grounding cables. This will cause the brake system to fail and cause an accident.
- Protect the cable from damage caused by pulling, cutting and short-circuiting.

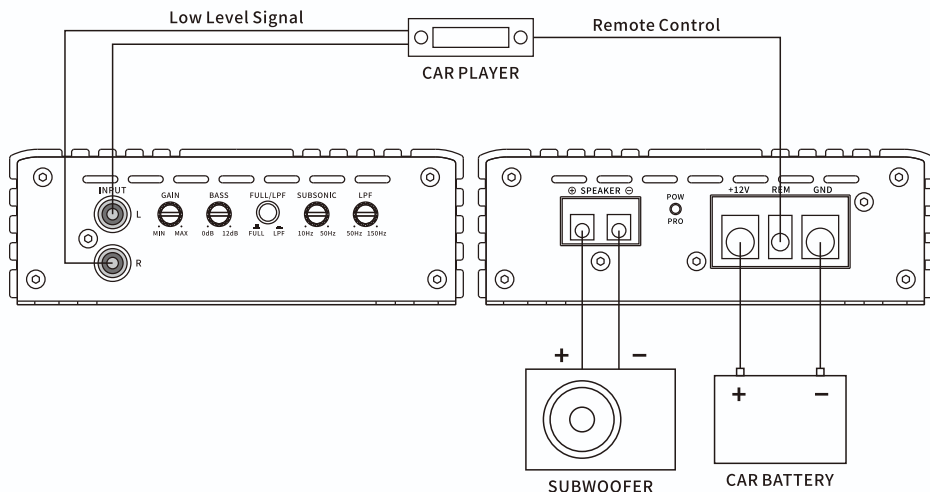

Connection Indicator Diagram

Output Power(14.4V)	1 × 285W (4Ω RMS)	Bass Boost	0~12dB (50Hz)
	1 × 480W (2Ω RMS)	Signal To Noise Ratio	95dB(A-weighted)
	1 × 600W (1Ω RMS)	Distortion (THD)	<0.5%
Amplifier Type	Class D	Input Sensitivity	0.3Volts
Frequency Response	20Hz-150Hz	Input Resistance	20 Kohms
High Pass Frequency	10-50Hz Adjustable	Operating Voltage	10-16 Volts
Low Pass Frequency	50-150Hz Adjustable	Dimension	185×130×45mm